

DLA+ PLC QUICKSTART GUIDE

DLA+ PLC



- ① Close all other running applications
- ② Insert the ABS Diagnostics CD or the DLA+ PLC Driver CD into your CD or DVD drive or download the latest DLA+ PLC drivers from www.JPROFleetProducts.com
 - ❑ If using the software CD, the installation program will begin automatically
 - ❑ If using downloaded drivers, begin the installation process by running the file you just downloaded
- ③ Connect the diagnostic cable to the **Vehicle** port on the DLA+ PLC
- ④ Attach the diagnostic cable's connector to the diagnostic port on the vehicle
- ⑤ Plug the USB cable into the USB port on the PC
- ⑥ Connect the other end of the USB cable to the port labelled **Computer** on the DLA+ PLC
 - ❑ Windows displays the Found New Hardware Wizard
 - NOTE:** If the Found New Hardware Wizard fails to start, be sure that the USB cable is pushed completely into the adapter's USB port
 - ❑ When asked to connect to Windows Update, select "No, not this time" and click Next
 - ❑ Select "Install the software automatically" and click Next
 - ❑ Click Finish to complete the installation
- ⑦ Your DLA+ PLC is ready to use with your diagnostic application!


www.noregon.com


www.JPROFleetProducts.com